

[Asterisk Interworking]AP-IP-Phone Basic Test Sheet			Result	Comment
[SIP Operation]				
SIP Register				
	1)	SIP Register Operation	OK	
Softkey Operation Check				
Idle Mode				
	1)	Redial	OK	
	2)	PickUp	OK	
	3)	Waiting	OK	
	4)	PSTN	OK	
Line Busy Mode				
	1)	Hold/EndCall Operation Check	OK	
		1-1) When Hold, resume Operation Check	OK	
		1-2) When Hold, endcall Operation Check	OK	
	2)	Transfer Operation Check	OK	
		2-1)Attended Operation Check	OK	
		2-2)Blind Operation Check	OK	
	3)	Speech and Speaker Phone Operation Check	OK	
Basic Call Control Test				
Call Forwarding				
	1)	Unconditional	OK	
	2)	Busy	OK	
	4)	No Answer	OK	
	5)	Call-forwarding using Absense Key	OK	
Call Wating				
	1)	Enable/Disable and Operation Check after Server Configuration	OK	
	2)	Secound Call Connect Check	OK	
	3)	Hold/End Call Operation Check	OK	
Miscellaneous				
	1)	Speaker Phone <-> HeadPhone Mode Change, Operation Check	OK	
	2)	MiC Mute Operation Check	OK	
	3)	Speaker Phone/HeadSet -> HandSet Mode Change, Operation Check	OK	
	4)	Absence key Long key(DND) Operation Check	OK	
[Asterisk Interwork Operation]				
Intercom operation check				
	1)	Intercom Function Feature code Operation Check	OK	
	2)	Intercom Allow Operation Check	OK	
	3)	Intercom Disallow Operation Check	OK	
	4)	When line is Busy, Intercome Operation Check	OK	
Parsing operation check				
	1)	Pasing Group Setting Operation Check	OK	
	2)	Pasing One-way Function Check	OK	
	3)	Pasing Duplex Function Check	OK	
	4)	Force if busy(When Line is busy, Pasing Call Connect Function)	OK	
		4-1) When this feature is enabled , Operation Check	OK	
		4-2) When this feature is disabled, Operation Check	OK	
		4-2) Whisper	OK	

	5)	Pasing Call-waiting Function Check	OK	
Feature Code operation check				
	1)	Call Forwarding Function		
		1-1)All Activate	OK	
		1-2)All Deactivate	OK	
		1-3)Busy Activate	OK	
		1-4)Busy Deactivate	OK	
		1-5)No Answer Activate	OK	
		1-6)No Answer Deactivate	OK	
	2)	2-1)Call Waiting Activate	OK	
		2-2)Call Waiting Deactivate	OK	
	3)	Call PickUp		
		3-1)General Call PickUP	OK	
		3-2)Directed Call PickUP	OK	
	4)	DND Activate	OK	
	5)	DND Deactivate	OK	
BLF Operat ion Check				
	1)	BLF Register Test	OK	
	2)	Normal Subscribe <-> Notify Message Check	OK	
	3)	Terminal LED Operation Check	OK	XML Parsing X