

[Asterisk Interworking]AP-IP-Phone Basic Test Sheet			Result	Comment
<b>[SIP Operation]</b>				
SIP Register				
	1)	SIP Register Operation	OK	
<b>Softkey Operation Check</b>				
<b>Idle Mode</b>				
	1)	Redial	OK	
	2)	PickUp	OK	
	3)	Waiting	OK	
	4)	PSTN	OK	
<b>Line Busy Mode</b>				
	1)	Hold/EndCall Operation Check	OK	
		1-1) When Hold, resume Operation Check	OK	
		1-2) When Hold, endcall Operation Check	OK	
	2)	Transfer Operation Check	OK	
		2-1)Attended Operation Check	OK	
		2-2)Blind Operation Check	OK	
	3)	Speech and Speaker Phone Operation Check	OK	
<b>Basic Call Control Test</b>				
<b>Call Forwarding</b>				
	1)	Unconditional	OK	
	2)	Busy	OK	
	4)	No Answer	OK	
	5)	Call-forwarding using Absense Key	OK	
<b>Call Wating</b>				
	1)	Enable/Disable and Operation Check after Server Configuration	OK	
	2)	Secound Call Connect Check	OK	
	3)	Hold/End Call Operation Check	OK	
<b>Miscellaneous</b>				
	1)	Speaker Phone <-> HeadPhone Mode Change, Operation Check	OK	
	2)	MiC Mute Operation Check	OK	
	3)	Speaker Phone/HeadSet -> HandSet Mode Change, Operation Check	OK	
	4)	Absence key Long key(DND) Operation Check	OK	
<b>[Asterisk Interwork Operation]</b>				
<b>Intercom operation check</b>				
	1)	Intercom Function Feature code Operation Check	OK	
	2)	Intercom Allow Operation Check	OK	
	3)	Intercom Disallow Operation Check	OK	
	4)	When line is Busy, Intercome Operation Check	OK	
<b>Parsing operation check</b>				
	1)	Pasing Group Setting Operation Check	OK	
	2)	Pasing One-way Function Check	OK	
	3)	Pasing Duplex Function Check	OK	
	4)	Force if busy(When Line is busy, Pasing Call Connect Function)	OK	
		4-1) When this feature is enabled , Operation Check	OK	
		4-2) When this feature is disabled, Operation Check	OK	
		4-2) Whisper	OK	

	5)	Pasing Call-waiting Function Check	OK	
Feature Code operation check				
	1)	Call Forwarding Function		
		1-1)All Activate	OK	
		1-2)All Deactivate	OK	
		1-3)Busy Activate	OK	
		1-4)Busy Deactivate	OK	
		1-5)No Answer Activate	OK	
		1-6)No Answer Deactivate	OK	
	2)	2-1)Call Waiting Activate	OK	
		2-2)Call Waiting Deactivate	OK	
	3)	Call PickUp		
		3-1)General Call PickUP	OK	
		3-2)Directed Call PickUP	OK	
	4)	DND Activate	OK	
	5)	DND Deactivate	OK	
BLF Operat ion Check				
	1)	BLF Register Test	OK	
	2)	Normal Subscribe <-> Notify Message Check	OK	
	3)	Terminal LED Operation Check	OK	XML Parsing X