

AP-VP300[™] BcN IP Video Phone

High Performance Broadband Convergence Network IP Video Phone Solution

Smart Messenger



AP-VP300

User Presence Features

(AP-VP300 New Additional Feature)



AddPac Technology

Sales and Marketing



IPNext50

www.addpac.com

Contents

- Overview
- IP Telephony Network Diagram for User Presence Service
- AP-VP300 User Presence Feature
- AP-VP300 User Presence UI
 - Presence Server Input
 - Presence Service Enable
 - Presence Server Login Success
 - Speed Button Profile Select
 - Speed Button Profile Update Notification
 - Speed Button Map View
 - Indicate User Presence Information on Touch Screen LCD
 - Speed Button List View
 - Speed Button Modify



Overview

- Used to support User Presence Service and Speed Dial
- Inter-operate Presence Server and Call Manager
 - Support User Presence Information
 - Support two or more Speed Button Profile List
- Support Speed Button Interface
 - Speed dialing service
 - Support User(Phone Number) Presence Information on LCD Screen
 - Editable global speed button profile, and Save in Phone



IP Telephony Network Diagram for User Presence Service



AP-VP300 User Presence Feature

• AP-VP300 Supports

- User Login and Logout Feature
- Presence Server Setup
 - Maximum 5 Presence Server Setup
 - Enable/Disable Connection to Presence Server
- Select Profile
 - Get Speed Button Profile (Global Profile) from Presence Server
 - Select Speed Button Profile in profile list received from Presence Server
 - With Speed Button Profile, user can edit as you want (change to Private Profile)



AP-VP300 User Presence Feature (cont.)

- Phone Book Feature
 - Speed Button view in Map type and List type
 - Speed Button Delete, Modify
 - Represent User Presence Information on OSD in real-time
 - AP-VP300 Phone Book itself Supports
 - Group Create, Modify, Delete
 - Contact Add, Delete, Modify
 - Search Contact by number, name, speed dial number
- Speed Button LED
 - Get User Presence Information in real-time
 - Connect Call using one Button (no need to press all dial digits)

AP-VP300 User Presence UI



Presence Server Input

Pres	ence	e S	erve	er	05/31 Thu 14:10 🛛 🗘 🌐 🕰 [
1	Pres	ence	Serv	er 1				1	71.17				
2	Serv	er1 F	Port			5051							
3	Pres	ence	Serv	er 2	172.17.252.2								
4	Serv	er2 F	Port			5051							
5	Presence Server 3												
6	Server3 Port												
NUM1	1	2	3	4	5	6	7	8	9	×	0	#	
n Bac	Backspace C			0	к	C Save All				Input Mode			

- Presence Server
 - Input Presence Server IP address and Port number to Connect, maximum 5 server info enable
 - Support IPv4, IPv6 address
 - Terminal try to connect to the first server, if it fails, terminal try to connect to next Presence Server



Presence Service Enable

Pres	enc	e S	etup)	05	5/31 T	⁻ hu 14	:10	+	¢ /8∎	G		<u>.</u>	
1	Pre	sence	e Enat	ole					ON					arrow key
2	Pre	sence	e Serv	er Nu	m				1					
3	Use	er ID							roo	t				
4	Use	r Pas	sword						route	ər				
												_	•	
NUM1	1	2	3	4	5	6	7	8	9	*	0	#		
Bac	kspa	ce		0	к		Sa	ve Al	I	In	put M	lode	1	

- Presence Setup
 - Presence Function enable/disable
 - Presence Server Num : the number of Presence Server in Presence Server List (This Can't be editable by user)
 - User Id, Password for Presence Server Login



Presence Server Login Success

Presence Se	tup 05/3	1 Thu 14:10	🗗 🖾 🖏 🖨	
Prese	ence Enable		On	
1 Presence	Enzble	10	N	
2 Presence	Server Num	1	root	Connect to
3 User ID		roc	oter and a	
4 User Pass	word	rout	ter	
			and the second sec	
NUM1 11. 2	3 4 5 Login	8 7 8 9 Success	* • #	
Backspace	ОК	Save All	Input Mode	

- After input Login Information, Press OK
 - Login result popup on the bottom
 - Icon Change on right side of the top
 - If Login is success, "Login Success" Message will appear on the bottom of the screen



Speed Button Profile Select

Butt	on Prof	ile	05/31 Thu 14:10 🛛 🌣 🍓 🤇							
0	AddPac	Sales								
0	AddPac	HardWar	e Team							
	AddPac	Software	Team							
	Private									
T Ba	ckspace	(ок	Save All		Input Mode				

- After connect to Presence Server, Terminal get Speed Button Profile List from Presence Server
 - User can Get Speed Button Profile which you select in list
 - If user don't want to get Speed Button Profile, select 'Private'. User can register or modify Speed Button Profile as user want.



Speed Button Profile Update Notification

6	Butt	on Profile	05/3	1 Thu 14:10	∂ & <u>6</u>		Speed Button Profile Update Notify
	0	AddPac Sal	les				
		AddPac Ha	rdWare Team				
		AddPac So	ftware Team				
		Private					
I	Ba	ckspace	ОК	Save All	Input I	Mode 1	

- When Speed Button Profile Update Notify comes
 - Icon Change to
 - After select Speed Button Profile, user get is ated Speed Button Profile from Presence Server and Icon Change back to



Speed Button Map View



- Show Button Profile in Map Type. The layout is same as Speed Button • Keys on the KeyPad
- Icon means •
 - In Idle Status : place of phone number
 - In Call Status : Call Status ICON turn on or blink. Each means difference status.



Ħ

 \blacksquare

Office

Etc

Indicate User Presence Information on Call Status ICON



Speed Button List View

Speed Button	05/31 Thu 14:10	Q 🔄 🖏 🗘 🗘
1	Jim	1000
2	Enjin	1001
3 🥎	Cindy	1002
4 🥎	Carry	1003
5	Olson	1004
6	Matthew	1005
7 💕	Anji	1006
Delete	Modify	View Map

- Show Button Profile in List Type.
 - If you want to call to Cindy, move to number 3(Cindy), press OK or Send key
 - Enable delete or modify speed button (Button Profile will change to 'Private')
 - Icon represents the place of a phone number



Speed Button Modify

Modify	Modify Button				05/31 Thu 14:10				Q 🕾 🗘			
1		Name	9					Jim	Ş			
2	Number				2000							
3						Home			<u> </u>			
NUM1 1	2	3	4	5	6	7	8	9	×	0	#	
Backsp	Backspace O		к		Save All			Input Mode				

- Modified Button Information Save in Local.
- After change Phone Number, user can get presence information for new number.



Thank you!

AddPac Technology Co., Ltd. Sales and Marketing

Phone +82.2.568.3848 (KOREA) FAX +82.2.568.3847 (KOREA) E-mail sales@addpac.com

