


Translation Digit Function Added

Category	S/W Release Version	Date
H.323	7.02	Feb. 2004

Function Description

This feature translates the relayed digits (DTMFs) according to the configured rule during a call. It is different from Number Translation that changes the Calling Party Number or Called Party Number when establishing a call.

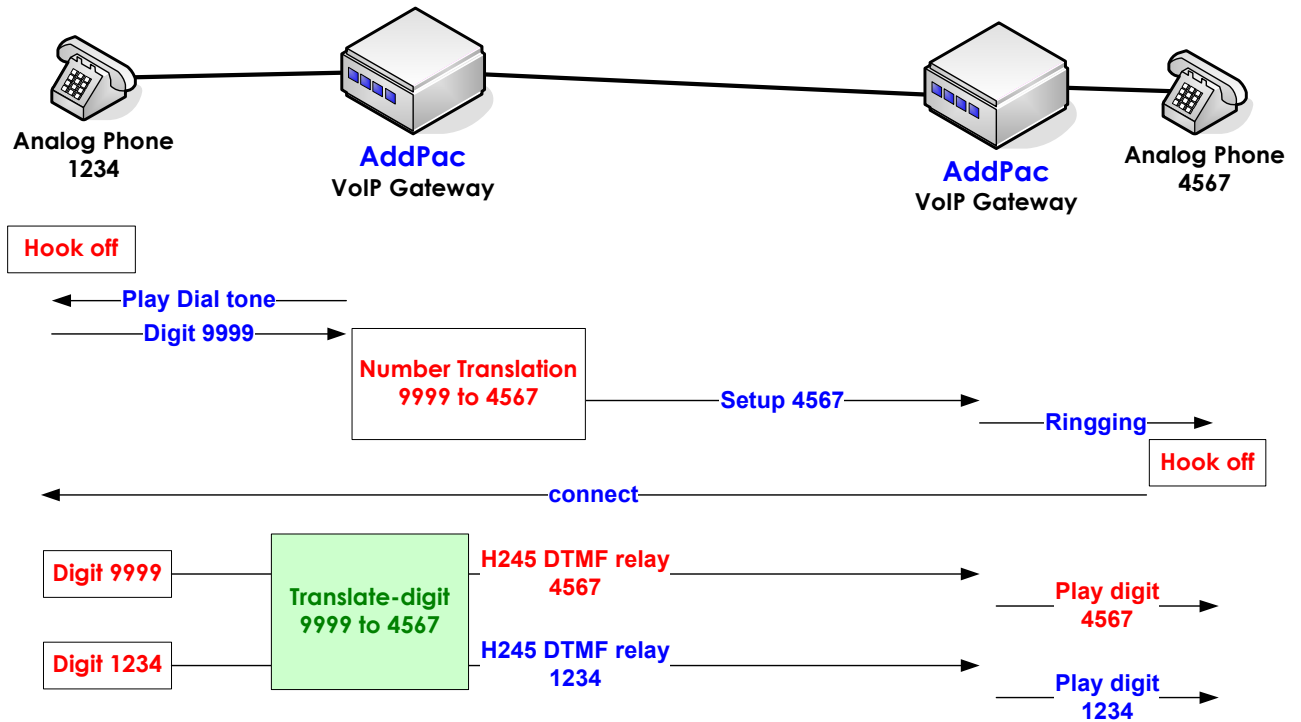

[Number Translation & Translation Digit]

The above figure shows the difference between **Number translation** (translation-rule) and **translation-digit** commands. In case of Number Translation, the calling gateway is applied with a rule to change “9999” to “4567.” It is applied to the Called Party Number. Thus the rule changes the e.164 number of the Called party. When the same rule is applied to “translation-digit,” it changes DTMF relay digits. That is, it changes the DTMF number relayed during a call.

Basic Configuration

Applying the translation rule to e.164

```
dial-peer voice 1000 voip
    destination-pattern T
    session target 61.33.161.47
    dtmf-relay h245-alphanumeric
    translate-outgoing called-number 0
!
translation-rule 0
    rule 0 9999 4567
```

Applying the translation rule to DTMF relay digit

```
!
dial-peer voice 1000 voip
    destination-pattern T
    session target 61.33.161.47
    dtmf-relay h245-alphanumeric
    translate-outgoing digits-in-call 0
!
translation-rule 0
    rule 0 9999 4567
```