

## E.164 Numbering Type Configuration Feature Added

Category	S/W Release Version	Date
H.323	7.01	22 Dec. 2003

### Function Description

This command configures the number type of calling and called party information included at the H.225 message. Usually, the numbering type is configured as “unknown” (as default).

However, sometimes, a certain equipment or VoIP network requires the same numbering type for the related equipments. The numbering type can be applied to both POTS peer and VOIP peer.

### Related Commands

**(config)# dial-peer voice X <pots |voip> → X : Identifier**

**(config-dialpeer-pots-0)# numbering-type ?**

abbreviated	Abbreviated representation of the complete number
international	International numbering type
national	National numbering type
network	Administrative or service number
subscriber	Subscriber number in a local network
unknown	Unknown type

Default: unknown