

VoiceFinder AP1100

VoIP Gateway



Installation Guide

Release 1.0

June. 2003

AddPac Technology Co., Ltd.
2/ 3F, Jeong-Am Bldg, Kangnam-Gu,
Seoul, Korea. Zip 135-080
Phone (82 2) 568-3848
Fax (82 2) 568-3847
E-mail: info@addpac.com
<http://www.addpac.com>

[Contents]

About This Guide

Chapter 1. VoiceFinder AP1100 VoIP Gateway Overview.....	11
Introduction to VoiceFinder AP1100 Gateway.....	11
Main Features	13
Hardware Description	13
Voice over IP Service.....	14
IP Routing Protocols	14
Network Managements.....	14
Security Functions	15
Operation and Managements.....	15
Other Scalability Features	15
Hardware Configuration and Network Interfaces	16
VoiceFinder AP1100 Gateway Part & Description	16
Front View of AP1100 Type A.....	16
Rear View of AP1100 Type A	18
Front View of AP1100 Type B	20
Rear View of AP1100 Type B	22
Network Interface.....	24
Voice Processing Interfaces.....	25
Chapter 2. Before Installation	26
Installation Requirements	26
Electrical Requirements.....	26
General Requirements	27
Network Connection Requirements	28
Necessaries.....	28
Ethernet Port	29
RS-232C Serial Console Port	29
Chapter 3. Gateway Installation	30
Unpacking	30
VoiceFinder AP1100 Interfaces and Cable connection	31
Async Serial Interface Connection	31
Ethernet Interface Connection	32
FXS Voice Interface Connection	34

FXO Interface Connection.....	35
VoiceFinder AP1100 Interface Connection Example.....	36
Booting.....	37
Use Console terminal with HyperTerminal	39
Chapter 4. Appendix	45
VoiceFinder AP1100 Gateway Technical Description.....	45
Cable Specification	48

[Table of Figures]

Figure 1-1: The network diagram using VoiceFinder AP1100 Gateway 11

Figure 1-2: The exterior view of VoiceFinder AP1100 Gateway 12

Figure 1-3: VoiceFinder AP1100 Type A Gateway front view 16

Figure 1-4: The rear panel image of VoiceFinder AP1100 Type A Gateway 18

Figure 1-5: VoiceFinder AP1100 Type B Gateway front view 20

Figure 1-6: The rear panel image of VoiceFinder AP1100 Type B Gateway 22

Figure 3-1: RS-232C Console port interface diagram between AP1100 VoIP gateway and PC or notebook computer 31

Figure 3-2: Network connection diagram between AP1100 gateway and WAN network 32

Figure 3-3: Network connection diagram between AP1100 gateway and local LAN network 33

Figure 3-4: FXS analog voice port interface diagram between AP1100 VoIP gateway and analog telephones, FAXs and PBX 34

Figure 3-5: FXO analog voice port interface diagram between AP1100 VoIP gateway and PBX or PSTN 35

Figure 3-6: The example diagram of network and voice interfaces of AP1100 VoIP gateway 36

Figure 3-7: MS-Windows Communication Emulator HyperTerminal 39

Figure 3-8: Assign a name for the new connection 40

Figure 3-9: Select the interface for Console cable 41

Figure 3-10: COM1 Properties 42

Figure 4-1: 10Base-T RJ-45 Connector 49

[Table of Tables]

Table 1-1: The interfaces and explanation of the front panel of AP1100 Type A Gateway	17
Table 1-2: The interfaces and explanation of the rear panel of AP1100 Type A Gateway	19
Table 1-3: The interfaces and explanation of the front panel of AP1100 Type B Gateway	20
Table 1-4: The interfaces and explanation of the rear panel of AP1100 Type B Gateway	23
Table 1-5: The interfaces of VoiceFinder AP1100 Gateways	23
Table 3-1: VoiceFinder AP1100 Gateway package	30
Table 4-1: The transferred signal and Pinout specification	48
Table 4-2: Signal and Pinout of Direct Ethernet Cable	49

About This Guide

This chapter outlines the structure of VoiceFinder AP1100 VoIP Gateway Installation Guide and explains the symbols and legends.

[Organization]

The VoiceFinder AP1100 VoIP Gateway Installation Guide is offered to assist the operation of VoiceFinder AP1100 VoIP Gateway. This manual is composed of 4 chapters.

Experienced users may refer directly to the related chapters. However, less experienced users are highly recommended to thoroughly review this manual before operation of the gateway.

- Chapter 1 「**VoiceFinder AP1100 VoIP Gateway Overview**」 provides an introduction to the H/W and S/W of VoiceFinder AP1100 VoIP Gateway and how to apply for the technical supports.
- Chapter 2 「**Before Installation**」 provides an explanation on the installation environment and cable requirements along with recommendations for safe operation of the equipment
- Chapter 3 「**Installation**」 explains the basic installation information on connecting the gateway with cables, how to use Console terminal and etc.
- Chapter 4 「**Appendix**」 includes the specification of the gateway, the cable and etc.

For technical supports, please contact AddPac Technology Co. Ltd.

AddPac Technology Co., Ltd
2/ 3 Fl. Jeong-Am Bulding, 769-12
Yeoksam-Dong, Kangnam-Ku, Seoul, Korea
Phone (02) 568-3848
Fax (02) 568-3847
E-mail: info@addpac.com
<http://www.addpac.com>

The revision history of VoiceFinder AP1100 VoIP Gateway Installation Guide is as follows.





Revision No.	Date	Comments	Written by
Version 1.0	June 2003	1 st Edition	AddPac R&D Center

[Symbols and Legends]

The symbols and legends used in this installation guide are as follows:

- Commands and Keywords are typed in **Bold**.
- Variables that require user inputs are typed in *Italic*.
- Square brackets ([]) are optional values.
- Keywords that are required but need to be selected are grouped in braces ({}), and are separated by Slashes (/).
- Angle brackets (<>) are required parameters must be inputted.

The following conventions are also used to attract the user’s attention.
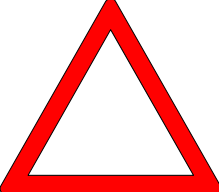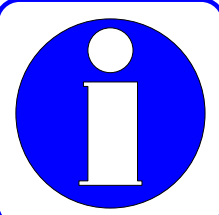
<p style="text-align: center;">Danger</p> 	<p>Danger</p> <p>This symbol signals possible danger. Misuse could result in physical injuries. Please follow the instructions to avoid any electronic shocks.</p>
<p style="text-align: center;">Warning</p> 	<p>Warning</p> <p>It warns the users to be careful with the operation. Otherwise, it could result in hardware damage of the equipment or loss of data.</p>
<p style="text-align: center;">Caution</p> 	<p>Caution</p> <p>This symbol calls for the user’s caution. Otherwise, it could result in hardware damage of the equipment, loss of data or system configuration.</p>
<p style="text-align: center;">Information</p> 	<p>Information</p> <p>This symbol indicates additional information offering detailed information for understanding this user guide.</p>

Chapter 1. VoiceFinder AP1100 VoIP Gateway

Overview

Introduction to VoiceFinder AP1100 Gateway

Information VoiceFinder AP1100 VoIP Gateway offers Voice over IP service by connecting Local Area Networks, Wide Area Network or broadband network of ADSL.



The below is the network diagram using VoiceFinder AP1100 Gateway.

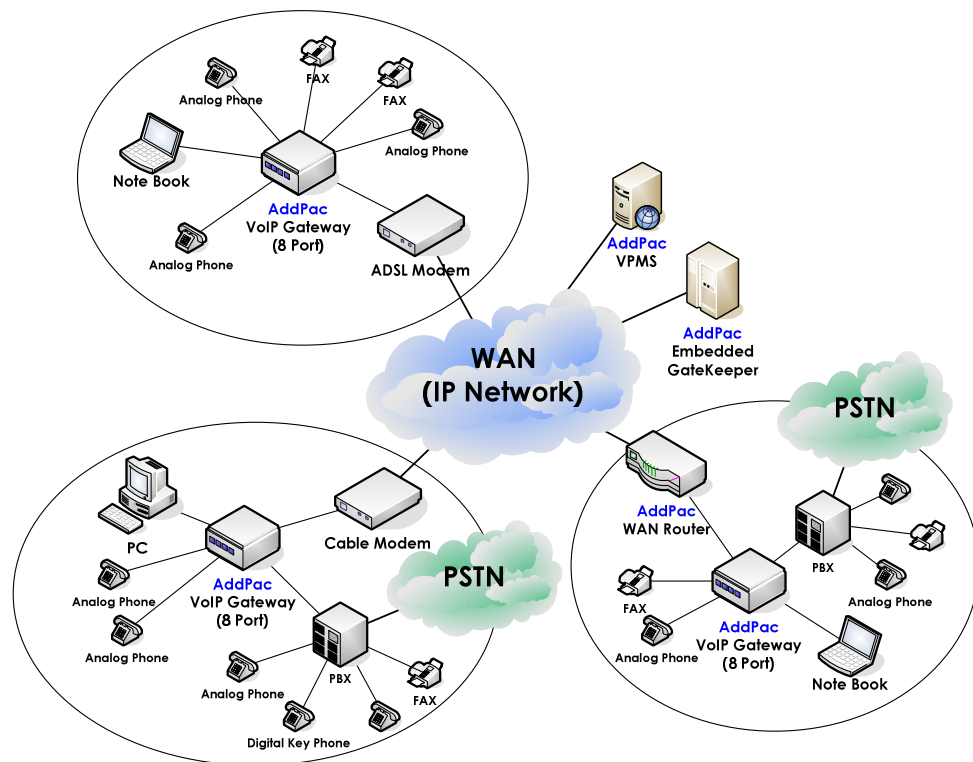


Figure 1-1: The network diagram using VoiceFinder AP1100 Gateway

It supports static RIP v1/v2 and OSPF v2 standard routing protocols and IEEE Spanning Tree Bridging function and it can be used for routing of both small and large-scale networks.

VoiceFinder AP1100 Gateway supports inter-operability with carrier-class backbone gateways, gatekeepers and routers along with existing AddPac VoIP gateway series realizing easy installation and maintenance.

The below figure is the exterior view of VoiceFinder AP1100 Gateway.




Figure 1-2: The exterior view of VoiceFinder AP1100 Gateway

As a supplementary service, VoiceFinder AP1100 Gateway provides Packet Filtering and Firewall function using Access List method. The Firewall function restricts access to the local network from outside networks using source and destination IP address access list information at the Network Layer (IP Layer) and at the Transport Layer (TCP/UDP Layer).

Also, using DHCP (Dynamic Host Configuration Protocol), this equipment can assign IP addresses to network clients automatically (DHCP server mode) and can receive a dynamically assigned IP address from a DHCP Server (DHCP client mode). VoiceFinder AP1100 Gateway solves the IP address shortage problem by using NAT (Network Address Translation) protocol.

Main Features

Information

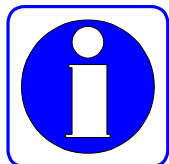

VoiceFinder AP1100 Gateway provides high-performance Voice over IP (VoIP) solution maintaining best voice quality with the latest voice compression algorithm and offers high-speed Internet access service for small enterprises, government and other public offices. It is equipped with a WAN port (10Mbps Ethernet port) and up to 8 FXS or 4 FXO voice interfaces.

Especially, VoiceFinder AP1100 Gateway is the ultimate solution for Small Medium Enterprise (SME) environment with its superior price vs. performance ratio. It is ideal for both enterprise users and offices with high-speed Internet subscribers of ADSL and cable modem.

Also, VoiceFinder AP1100 Gateway is easy to install and operate, even for first time users and offers static, RIP v1/2 and OSPF v2 routing function. It is the most economic and effective solution for high-speed Internet access VoIP gateway.

Hardware Description

VoiceFinder AP1100 Gateway offers the various network interface and ample system memory based on latest Embedded H/W technology and system memory. The main H/W features are as followings.

※ The hardware interfaces are various by each model. The specific hardware interface information on each model is provided on Chapter 2.

- High Performance WAN-to-LAN Residential VoIP Gateway
- High Performance 32bit RISC Microprocessor
- Stable, fixed Network interface structure
- 1-Port 10Mbps Ethernet Interface for WAN Interface (RJ45)
- 1-Port 10Mbps Ethernet Interface for LAN Service (RJ45)
- 1-Port HomePNA Interface (RJ11) (applicable only for AP1100 Type A)
- Up-to 8-Ports FXS Voice Interface (8 x RJ11)
- Up-to 4-Ports FXO Voice Interface (4 x RJ11)
- 1-Port Async Serial Interface for Console Port (RJ45)
- Compact, stylish design
- AC-DC External Power Supply Adapter
- Various system LEDs

Voice over IP Service

- VoiceFinder AP1100 Gateway supports voice and data integration service, VoIP service.
- Offers 8-channel voice ports and offers VoIP service by interoperating with PBXs, ordinary telephones and fax machines.
- Supports industry standard VoIP protocols such as H.323, SIP and MGCP.
- High performance DSP supports various voice compression algorithms such as G.723.1, G.729.A, G.711 and etc.
- Supports various voice-processing functions of VAD, DTMF & FAX Tone auto detection, CNG, Echo Cancellation and etc.
- Supports T.38 G3 FAX Relay.
- Interoperable with H. 323 based Gateways and Gatekeepers
- Interoperable with SIP Proxy Servers
- Interoperable with MGCs

IP Routing Protocols

VoiceFinder AP1100 Gateway supports various IP routing protocols. The main IP routing features are followings.

- Supports various IP routing and bridging protocol
- Static, RIP v1/v2, OSPF v2 routing protocols
- Transparent Bridging (IEEE Spanning Tree Protocol)

Network Managements

VoiceFinder AP1100 Gateway supports various network management protocols and functions.

- Standard SNMP Agent (MIB v2), MIB II, Bridge MIB Support
- Consols function with Async. Port.
- Remote Management using Console, Rlogin, Telnet.
- Traffic Queuing
- Web based Managements

Security Functions

VoiceFinder AP1100 Gateway supports various security functions.

- Standard & Extended IP Access List for network security function.
- Enable/Disable for Specific Protocols
- Multi-level User Account managements
- Auto-Disconnect for Telnet/Console Sessions

Operation and Managements

VoiceFinder AP1100 Gateway supports following operation and maintenance features.

- System Performance Analysis for Process, CPU, Connection I/F
- Configuration Backup & Restore for APOS Managements
- Debugging, System Auditing, and Diagnostics Support
- System Booting and Auto-rebooting with Watchdog Feature
- Data logging as various format
- IP Traffic Statistics with Accounting


Other Scalability Features

VoiceFinder AP1100 Gateway supports various supplementary service functions.

- DHCP server and relay function for easy IP management
- NAT/PAT function for effective IP management
- Remote S/W upgrade with TFTP & FTP
- Industry standard Command Line Interface type operation
- Network Time Protocol (NTP)

Hardware Configuration and Network Interfaces

Information This chapter explains the external form and network interfaces of VoiceFinder AP1100 Gateway.

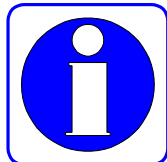

VoiceFinder AP1100 Gateway Part & Description

VoiceFinder AP1100 Gateway is made by the high intensity ABS with compact design. The front panel of VoiceFinder AP1100 Gateway includes various LEDs indicating the operational status of the device. On the rear panel, there is a LAN0 interface for WAN connection, LAN1 interface for LAN connection, HomePNA interface and various voice interfaces. .

Front View of AP1100 Type A

The front panel of VoiceFinder AP1100 Type A Gateway includes various LEDs indicating the operational status of the device. The following figure is the external form of VoiceFinder AP1100 Type A Gateway

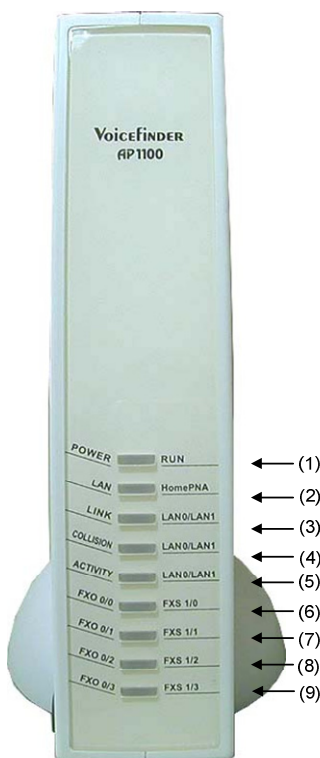


Figure 1-3: VoiceFinder AP1100 Type A Gateway front view

Table 1-1 shows the functional explanation about each LED of VoiceFinder AP1100 Type A Gateway.

Table 1-1: The interfaces and explanation of the front panel of AP1100 Type A Gateway

No.	LED	Description
(1)	POWER	Power LED, display whether external power is supplied normally or not. (Green)
	RUN	RUN LED, display the normal operation of the gateway. (Orange)
(2)	LAN	LAN LED, display the Ethernet port's status (Green)
	HomePNA	HomePNA LED, display the HomePNA port's status (Orange) , applicable to AP1100 Type A)
(3)	LINK	RUN LED, display whether the equipment is operated normally or not.
	WAN/Local	WAN/Local LED, display the status of WAN or Local networks. (WAN: Green , Local: Orange , both WAN & LAN: Yellow)
(4)	Collision	Collision, display the collision status of the network.
	WAN/Local	WAN/Local LED, display the status of WAN or Local networks. (WAN: Green , Local: Orange , both WAN & LAN: Yellow)
(5)	ACTIVITY	The Rx/Tx stauts of the network.
	WAN/Local	WAN/Local LED, display the status of WAN or Local networks. (WAN: Green , Local: Orange , both WAN & LAN: Yellow)
(6)	FXO0/0	Display the operation status of voice ports. (FXO 0/0: Green ,
	FXS1/0	FXS 1/0: Orange , for both FXO 0/0 and FXS 1/0: Yellow)
(7)	FXO0/1	Display the operation status of voice ports. (FXO 0/1: Green ,
	FXS1/1	FXS 1/1: Orange , for both FXO 0/1 and FXS 1/1: Yellow)
(8)	FXO0/2	Display the operation status of voice ports. (FXO 0/2: Green ,
	FXS1/2	FXS 1/2: Orange , for both FXO 0/2 and FXS 1/2: Yellow)
(9)	FXO0/3	Display the operation status of voice ports. (FXO 0/3: Green ,
	FXS1/3	FXS 1/3: Orange , for both FXO 0/3 and FXS 1/3: Yellow)

Rear View of AP1100 Type A

The rear side of the VoiceFinder AP1100 Type A VoIP Gateway includes 10Mbps Ethernet Interface ports for WAN/LAN interfaces, a HomePNA port, RS-232C serial port for management, and FXS and FXO interface ports for voice signal processing. It can also form network environment for WAN-to-LAN routing service.

Following figure shows the standard configuration of the back panel of VoiceFinder AP1100 Type A gateway.



Figure 1-4: The rear panel image of VoiceFinder AP1100 Type A Gateway

The following Table 1-2 explains the rear side panel interface of AP1100 Type A VoIP gateway.

Table 1-2: The interfaces and explanation of the rear panel of AP1100 Type A Gateway

No.	Interface	Explanation
(1)	DC Power	External DC Power Supply Input
(2)	FXS (1/0, 1/1, 1/2, 1/3)	4 FXS Ports : As FXS Voice Interface Ports, Phone or Fax Machine can be connected.(4 x RJ11)
(3)	HomePNA	HomePNA port (RJ11, applicable to AP1100 Type A).
(4)	LAN1	10Mbps Ethernet Port for LAN interface (RJ45)
(5)	LAN0	10Mbps Ethernet Port for WAN interface (RJ45)
(6)	Console	RS-232C serial port for system management (RJ45)
(7)	FXO (0/0, 0/1, 0/2, 0/3)	4 FXO Ports : As FXO Voice Interface Ports, PBX can be connected.(4 x RJ11)

Front View of AP1100 Type B

The front panel of VoiceFinder AP1100 Type B Gateway includes various LEDs indicating the operational status of the device. The following figure is the external form of VoiceFinder AP1100 Type B Gateway

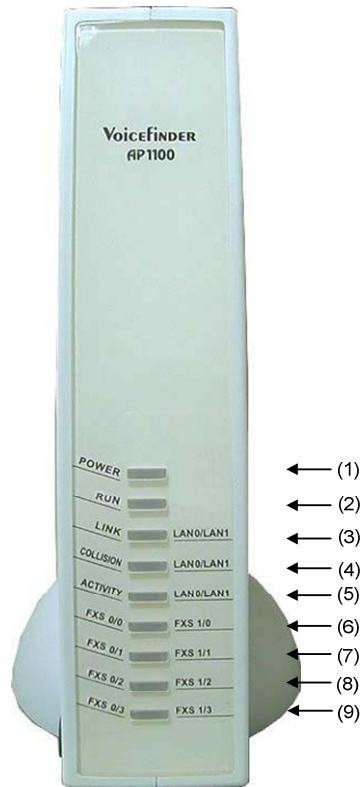


Figure 1-5: VoiceFinder AP1100 Type B Gateway front view

Table 1-3 shows the functional explanation about each LED of VoiceFinder AP1100 Type B Gateway.

Table 1-3: The interfaces and explanation of the front panel of AP1100 Type B Gateway

No.	LED	Description
(1)	POWER	Power LED, display whether external power is supplied normally or not. (Green)
(2)	RUN	RUN LED, display the normal operation of the gateway. (Orange)

(3)	LINK	RUN LED, display whether the equipment is operated normally or not.
	LAN0/LAN1	LAN0/LAN1 LED, display the status of WAN or LAN1 networks. (LAN0: Green , LAN1: Orange , both LAN0 & LAN1: Yellow)
(4)	Collision	Collision, display the collision status of the network.
	LAN0/LAN1	LAN0/ LAN1 LED, display the status of LAN0 or LAN1 networks. (LAN0: Green , LAN1: Orange , both LAN0 & LAN1: Yellow)
(5)	ACTIVITY	The Rx/Tx stauts of the network.
	LAN0/LAN1	LAN0/ LAN1 LED, display the status of LAN0 or LAN1 networks. (LAN0: Green , LAN1: Orange , both LAN0 & LAN1: Yellow)
(6)	FXS0/0	Display the operation status of voice ports. (FXS 0/0: Green ,
	FXS1/0	FXS 1/0: Orange , for both FXS 0/0 and FXS 1/0: Yellow)
(7)	FXS0/1	Display the operation status of voice ports. (FXS 0/1: Green ,
	FXS1/1	FXS 1/1: Orange , for both FXS 0/1 and FXS 1/1: Yellow)
(8)	FXS0/2	Display the operation status of voice ports. (FXS 0/2: Green ,
	FXS1/2	FXS 1/2: Orange , for both FXS 0/2 and FXS 1/2: Yellow)
(9)	FXS0/3	Display the operation status of voice ports. (FXS 0/3: Green ,
	FXS1/3	FXS 1/3: Orange , for both FXS 0/3 and FXS 1/3: Yellow)

Rear View of AP1100 Type B

The rear side of the VoiceFinder AP1100 Type B VoIP Gateway includes 10Mbps Ethernet Interface ports for WAN/LAN interfaces, RS-232C serial port for management, and FXS interface ports for voice signal processing. It can also form network environment for WAN-to-LAN routing service.

Following figure shows the standard configuration of the back panel of VoiceFinder AP1100 Type B gateway.



Figure 1-6: The rear panel image of VoiceFinder AP1100 Type B Gateway

The following Table 1-4 explains the rear side panel interface of AP1100 Type B VoIP gateway.

Table 1-4: The interfaces and explanation of the rear panel of AP1100 Type B Gateway

No.	Interface	Explanation
(1)	DC Power	External DC Power Supply Input
(2)	FXS (1/0, 1/1, 1/2, 1/3)	4 FXS Ports : As FXS Voice Interface Ports, Phone or Fax Machine can be connected.(4 x RJ11)
(3)	LAN1	10Mbps Ethernet Port for LAN interface (RJ45)
(4)	LAN0	10Mbps Ethernet Port for WAN interface (RJ45)
(5)	Console	RS-232C serial port for system management (RJ45)
(6)	FXS (0/0, 0/1, 0/2, 0/3)	4 FXS Ports : As FXS Voice Interface Ports, Phone or Fax Machine can be connected.(4 x RJ11)

Table 1-5: The interfaces of VoiceFinder AP1100 Gateways

Model	WAN	LAN	FXS	FXO	Console
AP1100 Type A	10Mbps Ethernet	HomePNA or 10Mbps Ethernet	4	4	1
AP1100 Type B	10Mbps Ethernet	10Mbps Ethernet	8	0	1

Network Interface

VoiceFinder AP1100 gateway supports the following network interfaces.

AP1100 Type A

- 1 Port 10Mbps Ethernet Interface for WAN
- 1 Port 10Mbps Ethernet Interface or 1 Port HomePNA Interface for LAN (Selectable by DIP Switch)
- 1 Port RS232C Asynchronous Serial Interface

AP1100 Type B

- 1 Port 10Mbps Ethernet Interface for WAN
- 1 Port 10Mbps Ethernet Interface for LAN
- 1 Port RS232C Asynchronous Serial Interface

With the above network interface, VoiceFinder AP1100 Gateway can establish WAN and LAN network supporting TCP/IP network protocol. So it can easily form VoIP network on the lease line or the broadband network of ADSL and Cable Modem. Also, the Console port offers easy configuration of the gateway. Moreover, its HomePNA interface realizes for more easy VoIP network formation at offices or SOHO.

The next section explains the network interfaces of VoiceFinder AP1100 Gateway.

1-Port 10Mbps Ethernet Interface for WAN (RJ45)

VoiceFinder AP1100 Gateway supports one (1) 10Mbps Ethernet Interface for WAN environment formation. It is a RJ45 type standard interface.

1-Port 10Mbps Ethernet Interface for LAN (RJ45)

VoiceFinder AP1100 VoIP Gateway offers one (1) 10Mbps Ethernet interface to form Local Area Network (LAN). It is a RJ45 type standard interface.

1-Port HomePNA LAN Interface (RJ11)

VoiceFinder AP1100 VoIP Gateway supports one (1) HomePNA (Phoneline Networking Alliance) interface.

1-Port Async Serial Interface for Console Port (RJ45)

VoiceFinder AP1100 Gateway provides network management features using an RS-232C asynchronous serial interface port.

Voice Processing Interfaces

The voice interfaces of VoiceFinder AP1100 Gateway can be connected to the ordinary telephones, fax machines and PBX.

AP1100 Type A

- 4-Port FXS voice interface ports
- 4-Port FXO voice interface ports

AP1100 Type B

- 8-Port FXS voice interface ports

VoiceFinder AP1100 Gateway is a network device offering not only data service, but also voice service at one device.

8 or 4- Port FXS Voice Interface

VoiceFinder AP1100 Gateway supports eight (8) or four (4)-port FXS (Foreign Exchange Station) Voice Interfaces. Using these FXS Voice Interfaces, VoiceFinder AP1100 Gateway provides analog line interface solutions, which can interface with general phone, FAX Machine, etc.

4-Port FXO Voice Interface Module

VoiceFinder AP1100 Gateway supports four (4)-port FXO (Foreign Exchange Office) Voice Interfaces. Using these FXO Voice Interfaces, VoiceFinder AP1100 Gateway provides analog line interface solutions that can interface with PBX, PSTN Line, etc.

Chapter 2. Before Installation

Installation Requirements

Warning

The following recommendation should be followed for safe operation of the product.



- Ensure VoiceFinder AP1100 Gateway is in a dust-free environment before and after installation.
- Make sure to install VoiceFinder AP1100 Gateway on a flat and safe surface.
- To prevent accidents, be careful with ties, scarf, sleeves, and any other loose clothing from entangling with the chassis.
- Avoid any actions that may effect the equipment or the operator.

Electrical Requirements

Danger

There are two main sources of electrical problems with VoiceFinder AP1100 Gateway: the power supply and static electricity.



This section describes safety recommendations for each case.

- **Electrical Safety**
 - ✓ Operate at a position where immediate shut-off of power supply is possible.
 - ✓ Turn off the power while installing the equipment.
 - ✓ Avoid operating the equipment alone at potentially dangerous environment.
 - ✓ Do not assume the power is switched off, but always confirm the power status.
 - ✓ Be extremely cautious when operating in a humid environment or with an ungrounded power extension cable.

- **Prevention of Static Electricity**

- ✓ The main chip-set of the gateway is very delicate and misuse may result in static electrical damage.
- ✓ If a static prevention wrist strap is available, strap it around the wrist and earth the cord before operating the equipment.
- ✓ If no wrist strap is available, earthing by holding a metal part of the Chassis will help prevent static electricity.

General Requirements

Warning



VoiceFinder AP1100 Gateway is ready for use where other electronic products can be used. However, the following conditions are recommended for maximum performance.

- A flat and well ventilated location.
- Secure the equipment safely at the desired place to install
- Do not place any objects on top of the equipment.
- A location without direct sunlight.
- Keep away from flammable, chemical, or magnetic objects.

Network Connection Requirements

Warning



Consider EMI Standard and distance limitation while installing VoiceFinder AP1100 Gateway.

The below explains PSTN cable, Ethernet cable, Console Cable of VoiceFinder AP1100 Gateway.

Necessaries

Unless ordered in advance, the tools and certain cables are not provided in the package. Prepare the following equipments and tools before the installation.

- Standard screwdriver set

- Cables for LAN and Console port connection
 - ✓ RJ-45 to RJ-45 cable for LAN port
 - ✓ RS-232C Console cable with RJ-45 connector (included in the package)

- Cable to connect Phone port
 - ✓ RJ-11 to RJ-11 ordinary telephone cable

Ethernet Port

VoiceFinder AP1100 Gateway offers two (2) RJ45 type 10BaseTX Ethernet ports on the rear panel and LEDs are indicating the port status are on the front panel. For the PIN information of the Ethernet cable, refer to Chapter 4.

RS-232C Serial Console Port

VoiceFinder AP1100 Gateway offers one (1) RJ-45 type RS-232C connector on the rear panel. This port is for the initial configuration, monitoring and debugging. For the PIN information of the RS-232C Console cable, refer to Chapter 4.

Chapter 3. Gateway Installation

Unpacking

Before unpacking, check for external damage of the packaging box.

If no external damages are found, confirm if the following items are enclosed.

Table 3-1: VoiceFinder AP1100 Gateway package

No.	Item	Contents	Q'ty
1	VoiceFinder AP1100 Gateway Main Body		1
2	Ethernet Cable (for RJ45 to RJ45)		1
3	Console Cable (for RJ45 to DB9)		1
4	Power supply External Adapter (110V/220V)		1

If any item is missing, immediately contact AddPac Technology Co. Ltd. customer support.

VoiceFinder AP1100 Interfaces and Cable connection

- Install VoiceFinder AP1100 Gateway at the suitable place illustrated at Chapter 2.

Async Serial Interface Connection

- Connect RJ45 connector of RS-232C serial console cable to the Console port and connect the other side of the cable (DB-9 connector) to the serial port of the PC.

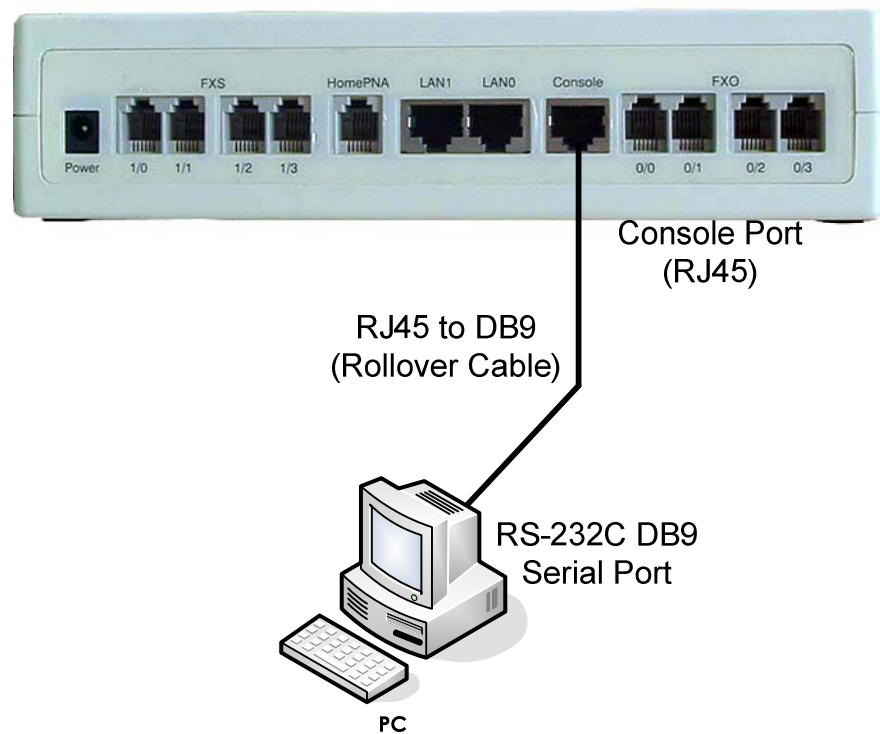


Figure 3-1: RS-232C Console port interface diagram between AP1100 VoIP gateway and PC or notebook computer

Ethernet Interface Connection

- With RJ45 UTP cable, connect LAN0 Interface of VoiceFinder AP1100 Gateway and LAN interface of the WAN equipment (Router or Modem).

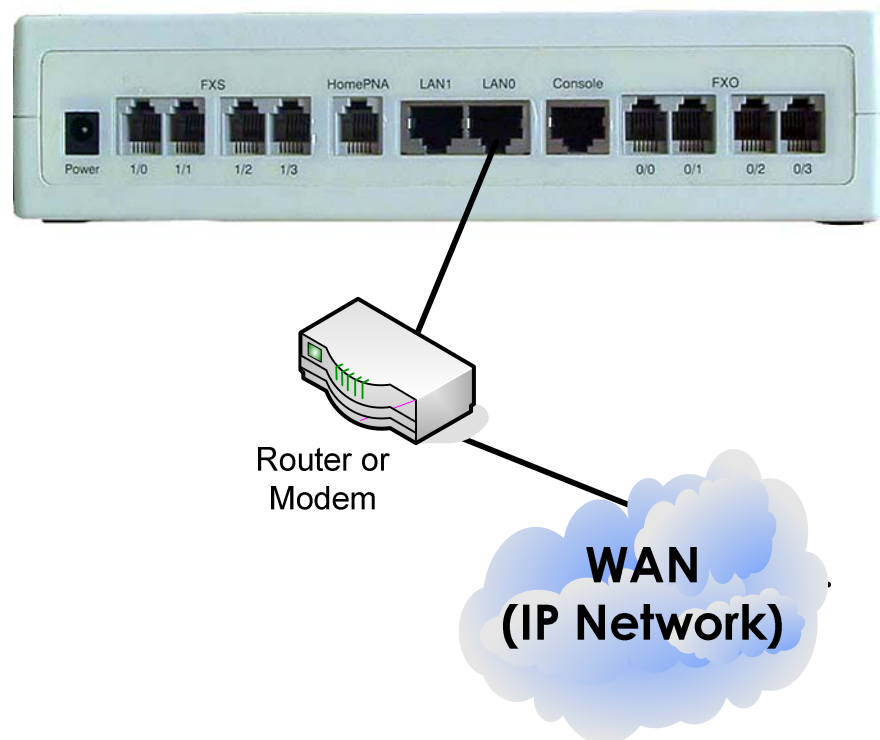


Figure 3-2: Network connection diagram between AP1100 gateway and WAN network

- In case of IP share mode, connect PC directed to the LAN1 Interface. In case of NAT/PAT, connected local HUB. For the detailed configuration, refer to Operation Manual or Quick Operation Manual.
- Use a cross cable to connect a user PC.
- Use a direct cable to connect a HUB.

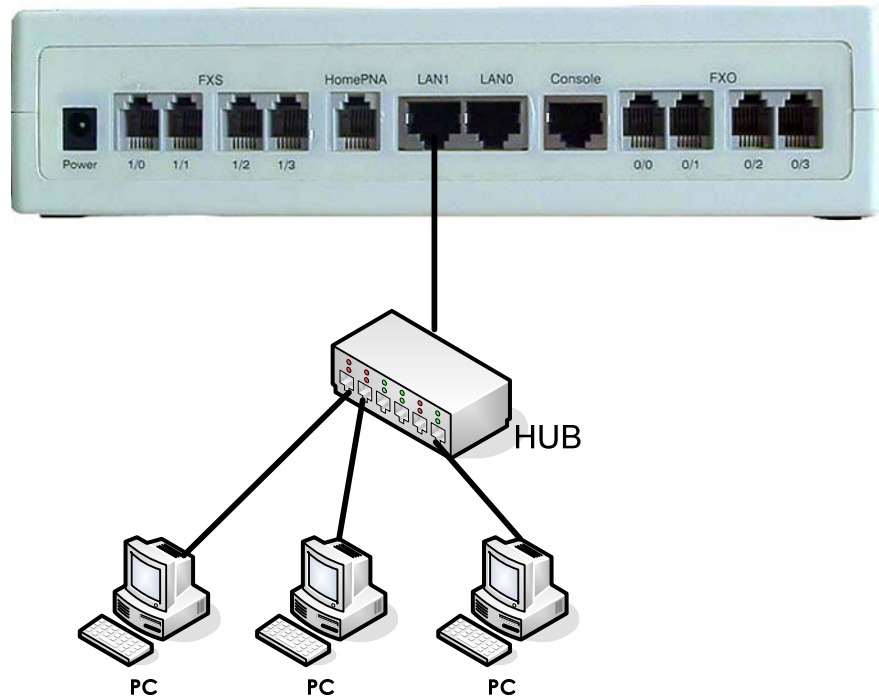


Figure 3-3: Network connection diagram between AP1100 gateway and local LAN network

FXS Voice Interface Connection

- Connect FXS port to analog phones with RJ11 cables.

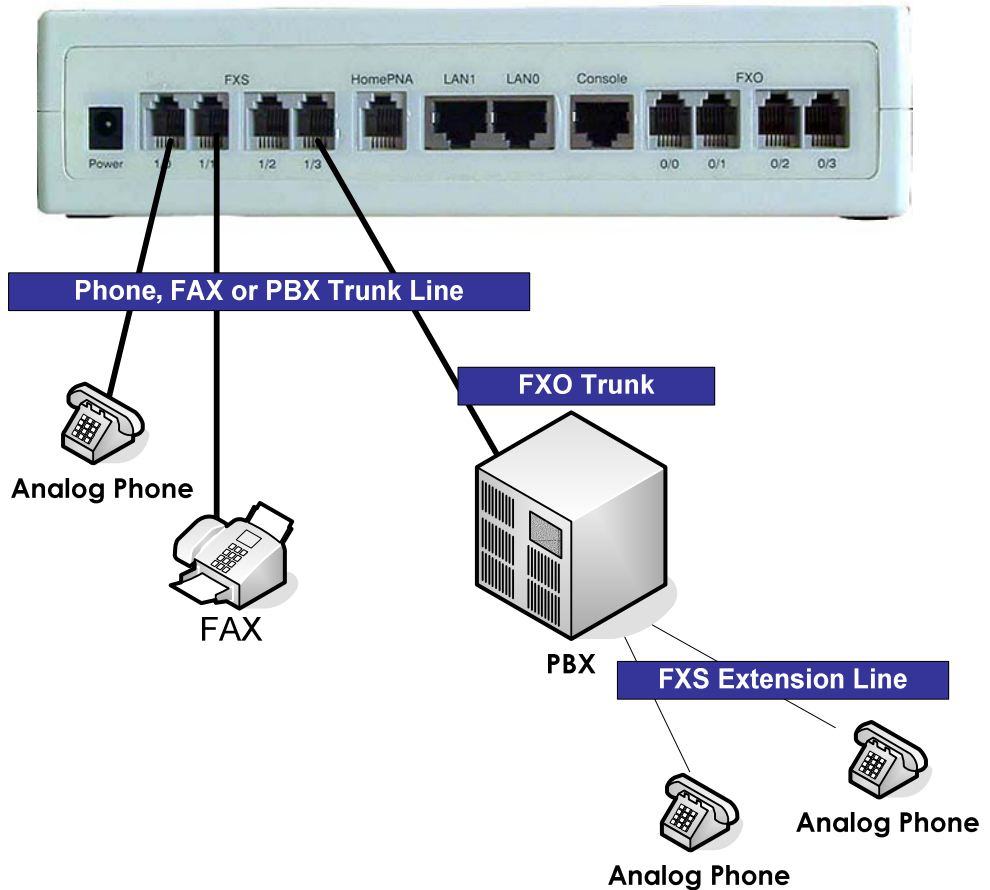


Figure 3-4: FXS analog voice port interface diagram between AP1100 VoIP gateway and analog telephones, FAXs and PBX

FXO Interface Connection

- Connect FXO Interfaces to PBX (Private Branch eXchange) with RJ11 cable.

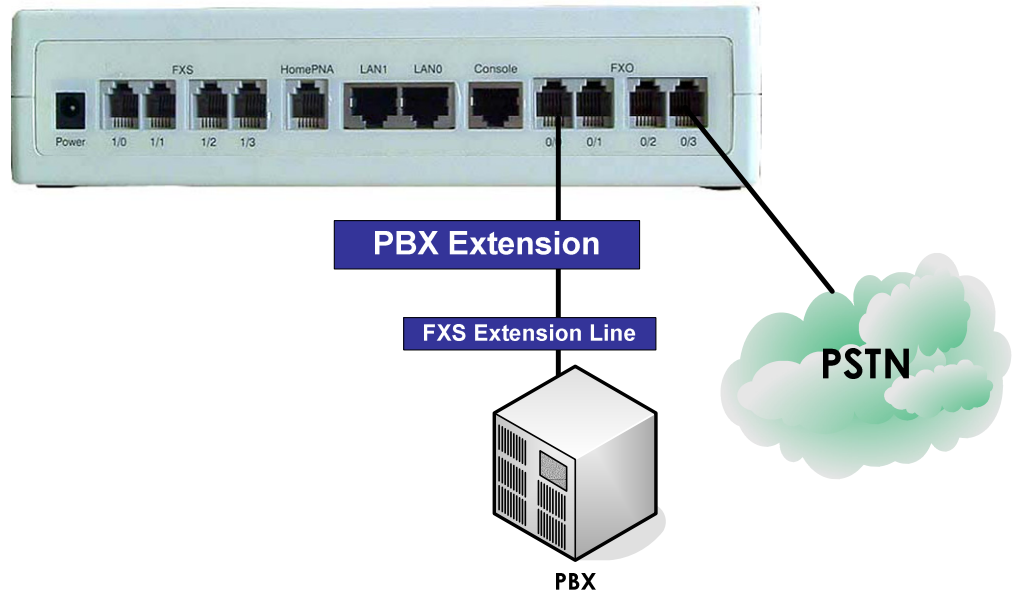


Figure 3-5: FXO analog voice port interface diagram between AP1100 VoIP gateway and PBX or PSTN

VoiceFinder AP1100 Interface Connection Example

- The below is an example of VoiceFinder AP1100 voice and data interface connections.

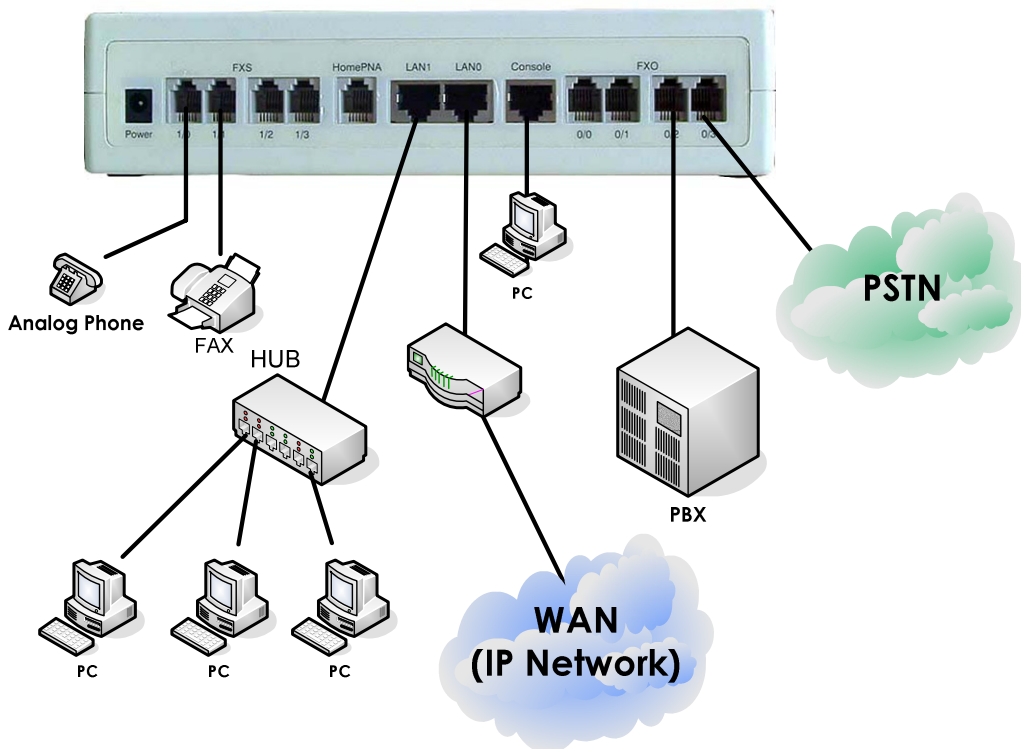


Figure 3-6: The example diagram of network and voice interfaces of AP1100 VoIP gateway

Booting

When power is supplied, the system is booted as described below

- VoiceFinder AP1100 Gateway performs a self-test and checks basic operations of the CPU, the memory and interfaces.
- The boot loader is executed, and the boot loader seeks for proper software image files. The boot loader loads the gateway software from the flash memory.
- If the boot loader cannot find proper software image file from the flash memory, the boot loader stands by in the boot mode until it receives proper software from the remote system. (At this time, the boot loader can download software through TFTP or FTP protocol.)
- When the software is loaded, the gateway starts to operate according to configuration information. However, if there is no configuration information, it operates according to the default values, and in this case, the operator shall set up related items for normal operation of the network.


Danger



After connecting all the interfaces, supply the power to VoiceFinder AP1100 Gateway. Supply the power after connecting the adapter to VoiceFinder AP1100 Gateway. Do not connect the adapter to the power supply before connecting it to the gateway. Also, use 110V adapter in case the power supply is 110V. However, the gateway detects both 110V and 220V, so there is no additional setting required.

Use Console terminal with HyperTerminal

- To use a PC as a Console terminal, the communication emulator application should be installed. When the PC is MS-Windows line, use the HyperTerminal Application.

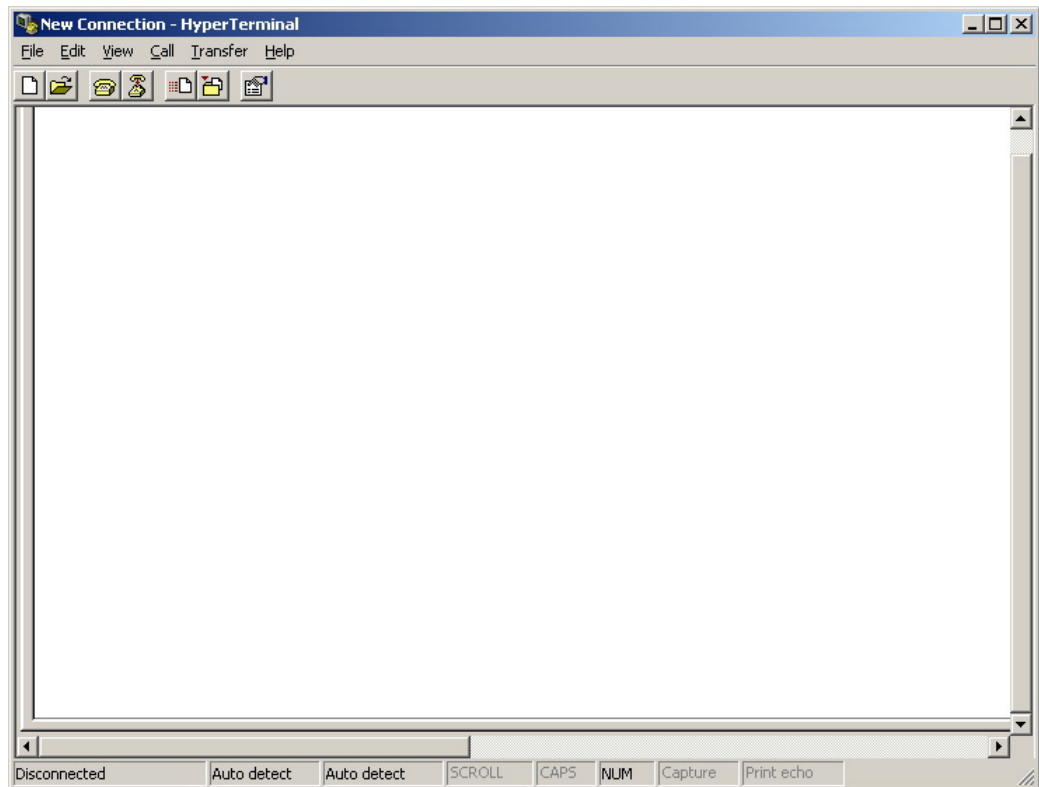

●
Figure 3-7: MS-Windows Communication Emulator HyperTerminal

- Assign a name to the connection. “AddPac” is used at the below example.

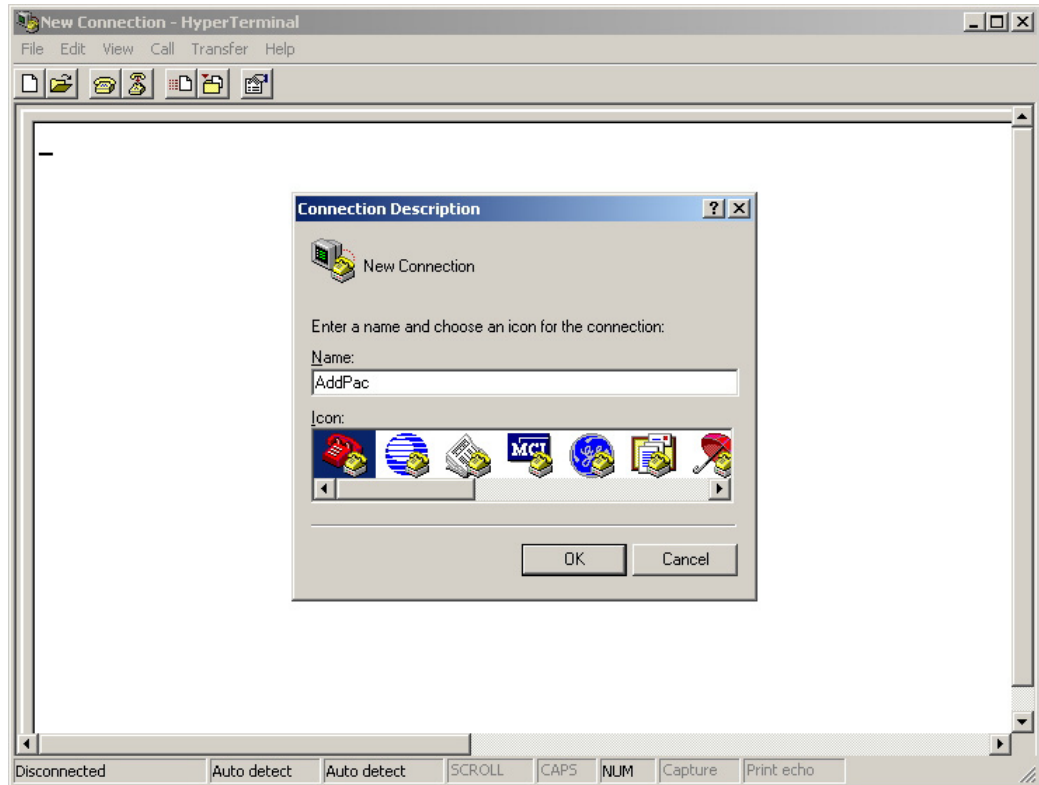


Figure 3-8: Assign a name for the new connection

- Select the interface where the Console cable is connected. Typically, the Console cable is connected to the RS-232C 9Pin Serial Port, so select the right port according to the user environment. "COM1" is selected at the below example.

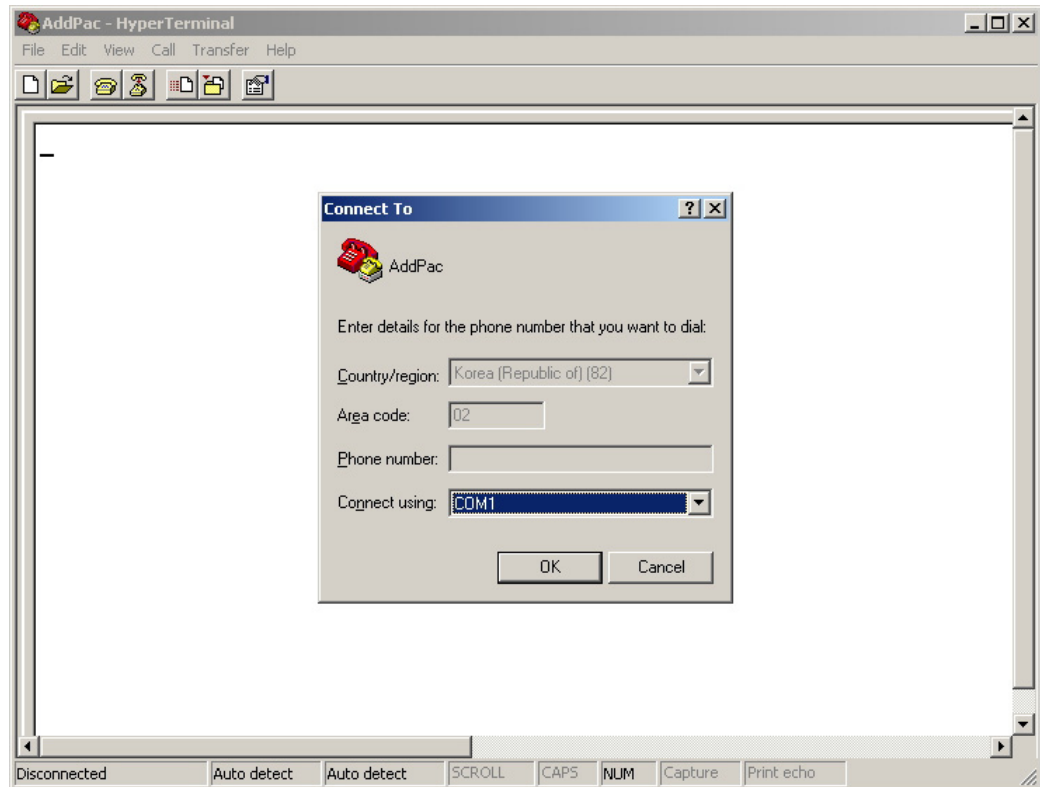


Figure 3-9: Select the interface for Console cable

- Set the port information. The below examples is based on “COM1” port.

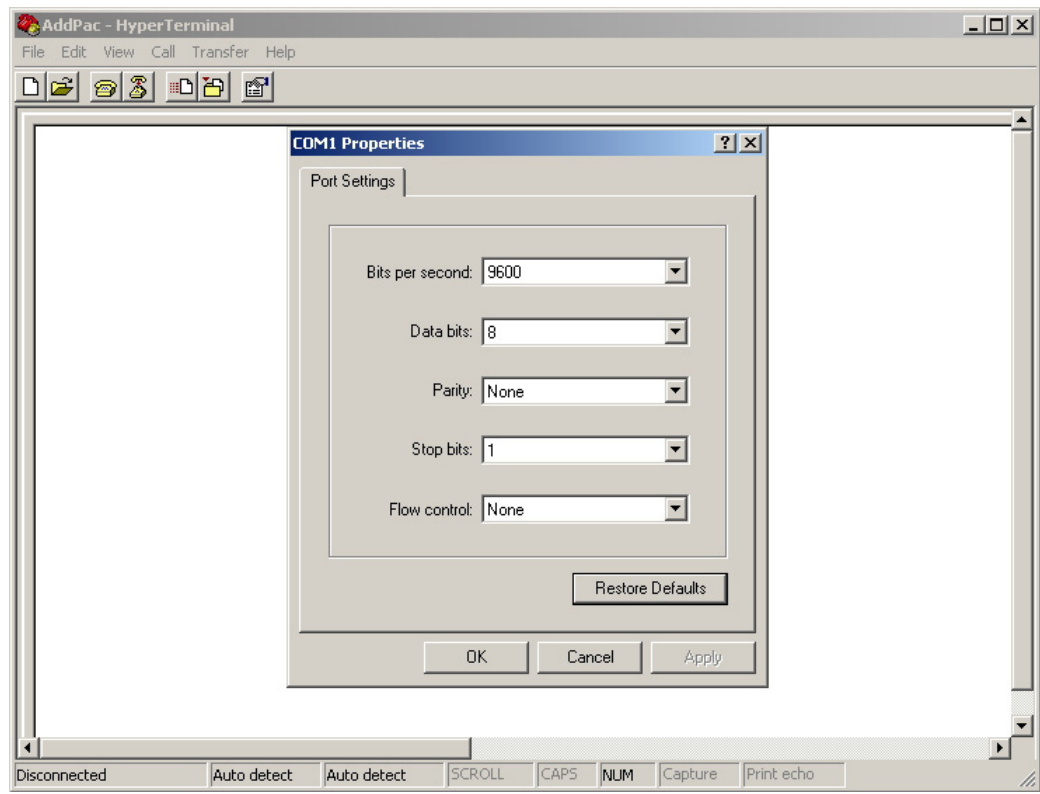


Figure 3-10: COM1 Properties

- After the configuration, press "Enter" button, then the below message will be displayed on the HyperTerminal. This message shows the routing S/W version, Gateway H/W test result, memory and etc.

System Boot Loader, Version 1.3.6/1

Copyright (c) by AddPac Technology Co., Ltd. Since 1999.

VoiceFinder Router Series (AP1100)

Serial Number: AP1100-010102

32BIT RISC Processor With 33554432 Bytes System Memory

524288 Bytes System Flash Memory

4194304 Bytes 2nd System Flash Memory

1 RS232 Serial Console Interface

1 Ethernet/IEEE 802.3 Interface

1 Ethernet/IEEE 802.3 or HomePNA Interface

RGW System software Revision 5.44Tg

Released at Sun Sep 3 10:32:11 2000

Program is 3494964 bytes, checksum is 0x103c5579

Local Time : Thu Jan 1 03:13:57 1970

Copyright (c) by AddPac Technology Co., Ltd. Since 1999.

The system is not configured yet or backup data is invalid.

Please login to system as a "root" and make configuration.

Voice Module (0): FXO

Voice Module (1): FXS

DSP S/W download

```
Voice Module (0): .... OK
Voice Module (1): .... OK

The System is ready. Please login to system.
login:
Interface ethernet0.0, changed state to UP
login: root
password:*****
RGW - Login : root at Console on Thu Jan 1 03:14:59 1970

router#
```

- With the log-in message, input the user name “root” and the password “router”. After the log-in process, the prompt “router#” is displayed on the console terminal.
- There are two types of prompts used for VoiceFinder AP1100 Gateway: “router>” and “router#”. The “>” prompt indicates that the user is not an administrator. With this prompt, the user is unable to use certain commands: particularly the configuration commands. The “#” prompt indicates that the user is an administrator (or root), and the user is authorized to use all the functions and commands.
- Log-in as “Admin” allows changing settings. Therefore, it is advised to change the default password for security purposes. Refer to Quick Operation Guide & APOS Operation Guide for password change and detailed configuration

Chapter 4. Appendix

VoiceFinder AP1100 Gateway Technical Description

This Chapter explains the supported Technical Specification of VoiceFinder AP1100 VoIP Gateway. (* means that the item is not yet implemented.)

IP Routing Service

IP Routing Protocols	Static
	Routing Information Protocol (RIP) v1/2
	Open Shortest Path First (OSPF) v2 Protocol
	IEEE 802.1Q VLAN Routing

LAN Service

Ethernet Interface	10Mbps Ethernet Interface
Configuration Management	Port Configuration
	Secondary/Subnet Support
	MTU Size Change
	ARP Entry Revalidate Function
	Transmit/Receive Connection Recovery Function

Voice over IP Service

VoIP Protocols	ITU-T H.323 Protocol with ITU-T H.235 Security Feature
	Session Initiation Protocol (SIP)
	MGCP
Voice Compression	G.723.1 MP-MLQ, 6.3Kbps, 5.3Kbps
	G.729.A CS-ACELP, 8Kbps
	G.711 PCM, 64Kbps
Voice Processing	Voice Activity Detection (VAD)
	T.38 Protocol (FAX)
	Dual Tone Multi Frequency (DTMF)
	Comfort Noise Generation (CNG)
	Echo Cancellation

Network Managements

SNMP	Standard SNMP Agent MIB v2
Web	Web Based Management using HTTP Server Interface
Others	Traffic Queuing
	Frame-Relay Flow Control

Security Functions

IP Access List	Standard and Extended IP Access List, IP Packet Filtering
PPP User Authentication	Password Authentication Protocol (PAP)
	Challenge Handshake Authentication Protocol (CHAP)
Others	Access Control and Data Protections
	Enable/Disable for Specific Protocols
	Multi-level User Account Management
	Auto-disconnect for Telnet/Console Sessions

Operation and Managements

Console Port	RS-232C Based Async Serial Interface Support
Remote Management	Console, Rlogin, Telnet
System Performance Analysis	Process, CPU, and Connection Interface
APOS Management	APOS Configuration Back-up and Restore
	Remote Upgrade Function using FTP/TFTP
Others	Debugging and System Auditing
	Data Logging and Diagnostics
	System Booting, Auto-rebooting with Watch-dog Timer
	IP Traffic Statistics with Accounting

Other Scalability Features

DHCP	Dynamic Host Configuration Protocol (DHCP) Server and Relay Functions
NAT/PAT	Network Address Translation (NAT) Protocol
	Port Address Translation (PAT) Protocol
Bridging	IEEE Standard Spanning Tree Bridging Protocol
	Remote Bridging Support
	Concurrent Bridging Support
User Interface	Industry Standard Command Line Interface (CLI)
Others	Network Time Protocol (NTP) Support

Hardware Specification

Microprocessor	32bit RISC Microprocessor
Network Interface	1-Port 10Mbps Ethernet Interface for WAN (RJ45)
	1-Port 10Mbps Ethernet Interface(RJ45) or 1-Port HomePNA Interface(RJ11) for LAN
	1-Port Async Serial Interface for RS-232C Console Port (RJ45)
Voice Interface	8 or 4-Port FXS Voice Interface (4 x RJ11)
	4-Port FXO Voice Interface (4 x RJ11)
Memory	4MB Flash Memory
	32MB SDRAM / Main Memory
	512KB Boot Flash Memory
System LED	Power, LAN, WAN, Voice Ports (Front Panel)
Power Supply	DC External Power Supply (5V x 4A)
Power Requirement	20 Watt
Operating Temperature	0°C ~ 55°C
Storage Temperature	-40°C ~ 85°C
Relative Humidity	5% ~ 95%
Cooling Method	Internal heat resistance
Width x Height x Depth	50 x 210 x 210 (mm)
Weight	655g

Cable Specification

This Appendix provides information about the Pinout specifications of the following cables used with VoiceFinder AP1100 Gateway.

- Console Port Signal and Pinout (RJ-45 to DB9)
- Ethernet Cable Assemble (RJ-45 to RJ-45) Pinout

[Console Port Signal & Pinout]

In order to connect the gateway console port with the Terminal Emulating PC, the RJ-45 to DB9 (Female DTE Connector) cable is used. The transferred signal and Pinout specifications are enlisted in the following table.

Table 4-1: The transferred signal and Pinout specification

Gateway Console (DTE)	RJ-45	DB-9	Console Device (PC)
Signal	RJ-45 Pin	DB-9 Pin	Signal
RTS	1	8	CTS
DTR	2	6	DSR
TxD	3	2	RxD
GND	4	5	GND
GND	5	5	GND
RxD	6	3	TxD
DSR	7	4	DTR
CTS	8	7	RTS

[Ethernet Cable Assemble (RJ-45 to RJ-45) Pinout]

In order to connect the gateway with other equipments (i.e. HUB), the RJ-45 to RJ-45 Ethernet Cable is used. The RJ-45 Connector Pin sequence is provided below and the transferred signal and Pinout specifications are enlisted at the below table.

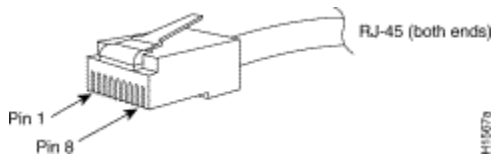


Figure 4-1: 10Base-T RJ-45 Connector

Table 4-2: Signal and Pinout of Direct Ethernet Cable

RJ-45	Signal	Direction	RJ-45 Pin
1	Tx +	→	1
2	Tx -	→	2
3	Rx +	←	3
4	-	-	4
5	-	-	5
6	Rx -	←	6
7	-	-	7
8	-	-	8

1. These specifications are for serial cables connecting the gateway and the HUB.
2. For gateway to gateway or gateway to PC connection, the Cross Cable must be used.